






Delta Plus – Back Cladding Assembly Instructions




Assemble in
20 Minutes





Requires
Two people

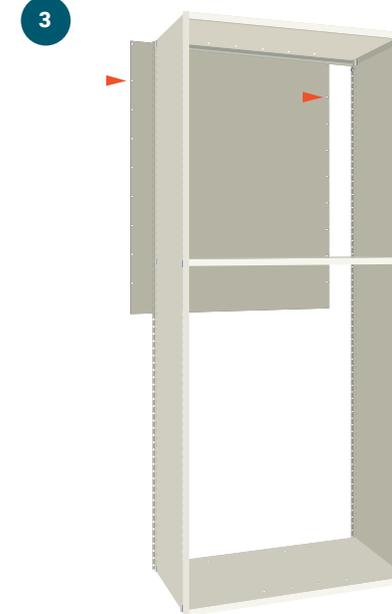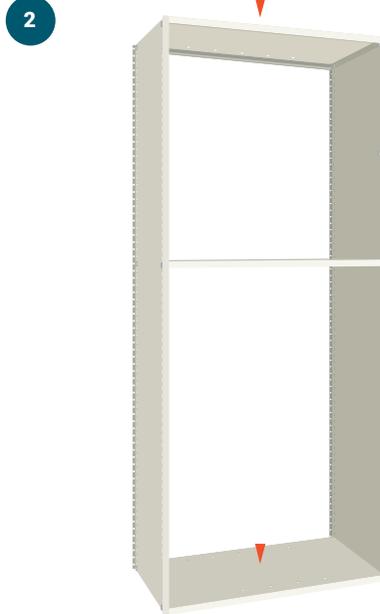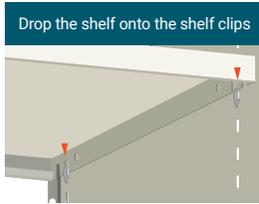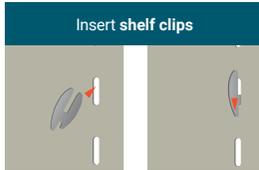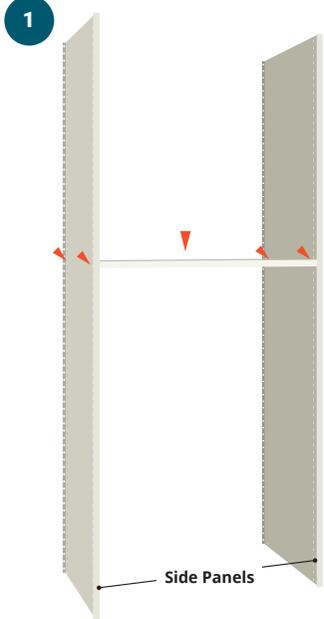



Rear View
Top back panel installation

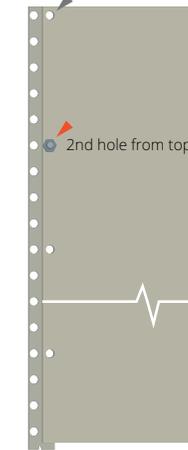

Side View

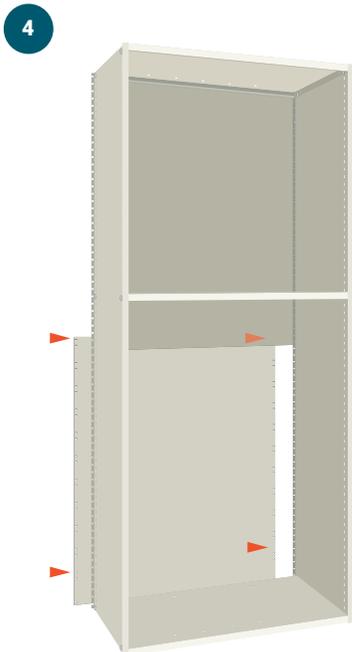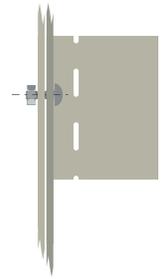

Rear View
Bottom back panel installation

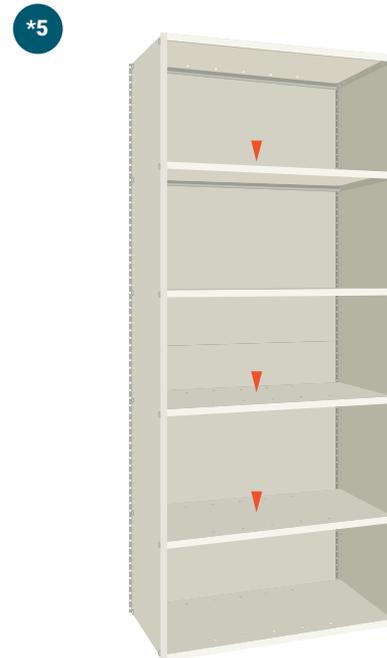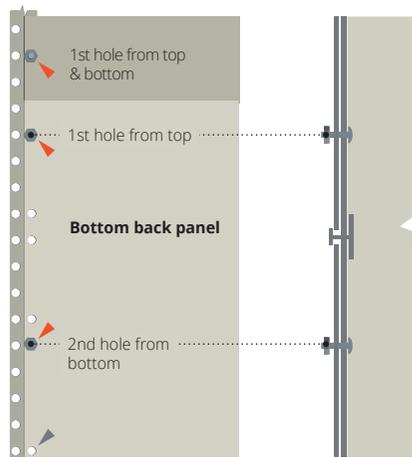

- 1 Insert shelf clips at mid-height on both side panels. Once the shelf clips are inserted, slot the shelf over the clips. The first shelf should be mid-height so to ensure the bay is stabilised throughout assembly.
- 2 Install the top and bottom shelves by inserting the shelf clips in the same way as in step 1. The shelf clips are positioned at the very top and the second hole up from the bottom of the side panel.
- 3 Attach the top back panel to both side panels using the M6 nuts and bolts
- 4 Attach the bottom back panel to both side panels using M6 nuts and bolts. Use the remaining nuts and bolts to secure the back panels evenly.
- *5 Attach the rest of the shelves at desired heights.

Safety Precaution

Requires two people wearing safety gloves, shoes and glasses

Tools required

Wide flat head screwdriver,
Spanner 10mm